

Installation Suggestions for Your Cedar Fence

Build on 3-Rails

Use 3-rails in new construction or add a 3rd rail when remodeling.

A: Top rail should be 6" from the top of fence.

B: Bottom rail should be 6" from the bottom of fence.

C: Center the middle rail half way between the top & bottom rail.


Construccion con 3 travesanos

Utilice 3 travesanos en la nueva construccion o anada un tercer travesano al realizar una reforma.

A: el travesano superior debe estar a 6 pulgadas (15,24 cm) de la parte superior de la valla.

B: el travesano inferior debe estar a 6 pulgadas (15,24 cm) de la parte inferior de la valla.

C: el travesano central debe estar entre el travesano superior y el inferior.

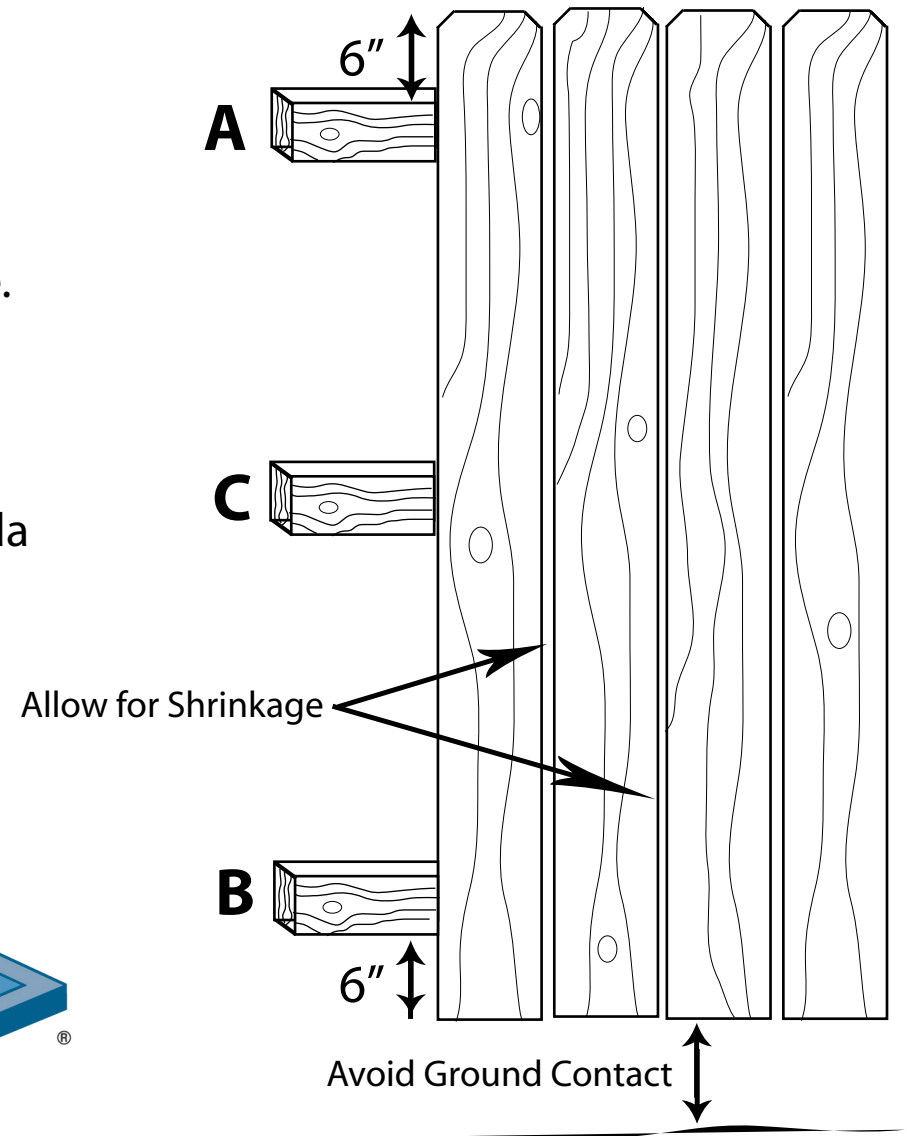

**SIERRA PACIFIC
INDUSTRIES**
Growing Forests For Our Future

www.spi-ind.com

(530) 378-8000